

CAN11040S1C Information Guide

MAN0038.3



cangoe
power

off-grid / on-grid / on-demand.

Contents

| | |
|---|----|
| Safety Precautions | 2 |
| Specifications | 2 |
| CAN1040S1C QUICK GUIDE | 3 |
| Dimensions | 4 |
| Mounting Orientation | 4 |
| Wiring Schematic..... | 5 |
| Example of System Setup..... | 6 |
| VICTRON CONNECT APP | 7 |
| VICTRON SMART SHUNT 500A | 8 |
| Victron SmartSolar MPPT 75/15..... | 9 |
| Example Solar Panel Array | 10 |
| Series Array..... | 10 |
| Parallel Array..... | 10 |
| DCDC CHARGER..... | 11 |
| Recommended Wire Sizes and Gauges Chart | 12 |
| Safety Tips | 13 |
| Longevity Tips | 13 |
| Tips for Use..... | 13 |
| Maintenance Tips | 14 |

Safety Precautions


WARNING

- ❑ Avoid mechanical shock
- ❑ Do not expose the battery to fire
- ❑ Do not pierce the battery
- ❑ Do not disassemble
- ❑ Do not drill into the battery enclosure
- ❑ Do not short battery terminals
- ❑ Do not charge battery below 0°C
- ❑ Do not store below -20°C or above 60°C
- ❑ Risk of burns if misused
- ❑ Always follow safe working practices
- ❑ Installation of this device must only be carried out by appropriately qualified competent persons.
- ❑ All connections must be fused at recommended fuse ratings to avoid damage to components.
- ❑ All minimum cable gauges and maximum lengths must be followed.

Specifications

| | |
|--------------------|------------------------|
| Cell Type | Lithium Iron Phosphate |
| Total Capacity | 110Ah |
| Nominal Voltage | 12.8V |
| Charge Voltage | 13.8 – 14.6V |
| Float Voltage | 13.6V |
| Charge Current | 100A |
| Discharge Current | 100A MAX. Continuous |
| | 200A Surge |
| DC-DC Charger | 2 x 20A |
| Operating Temp | 0-45°C |
| Dimensions (LxWxD) | 1060mm x 268mm x 61mm |

Dimensions

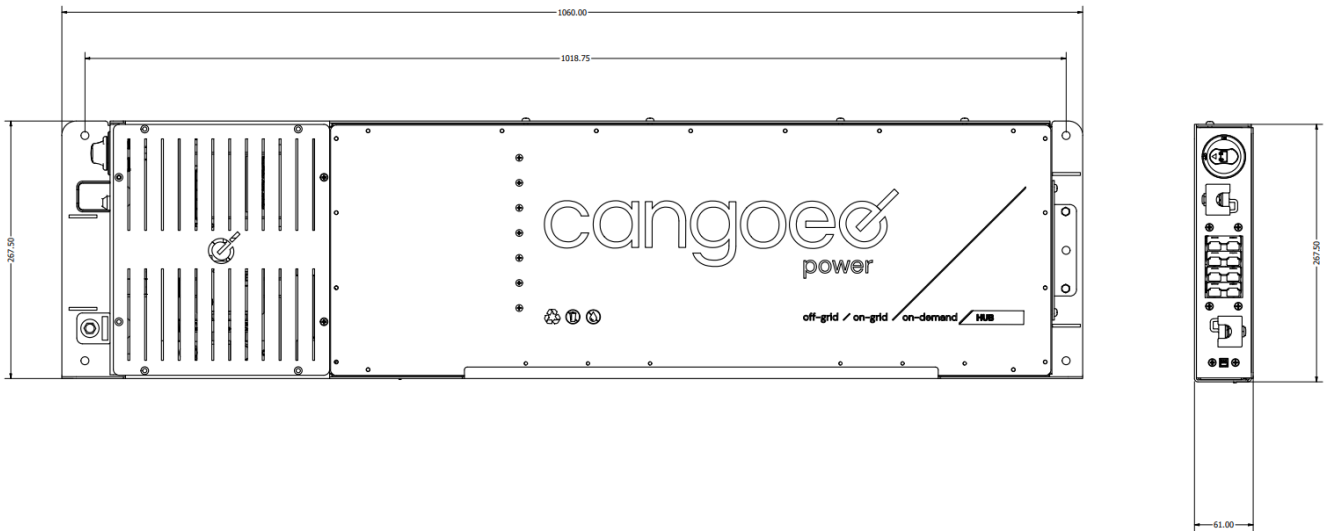


Mounting Orientation

| CORRECT MOUNTING ORIENTATION | INCORRECT MOUNTING ORIENTATION |
|---|--------------------------------|
| | |
| <p>The Selector Switches <u>must always</u> be facing upwards. The Isolator Switch <u>must always</u> be facing upwards.</p> | |

Wiring Schematic

To fully disconnect the solar, the solar input ISOLATOR SWITCH must be turned off first. Once off the red anderson plug can be removed, disconnecting solar loads.

Please Note: No external shunt is required as a shunt is already pre built-in.

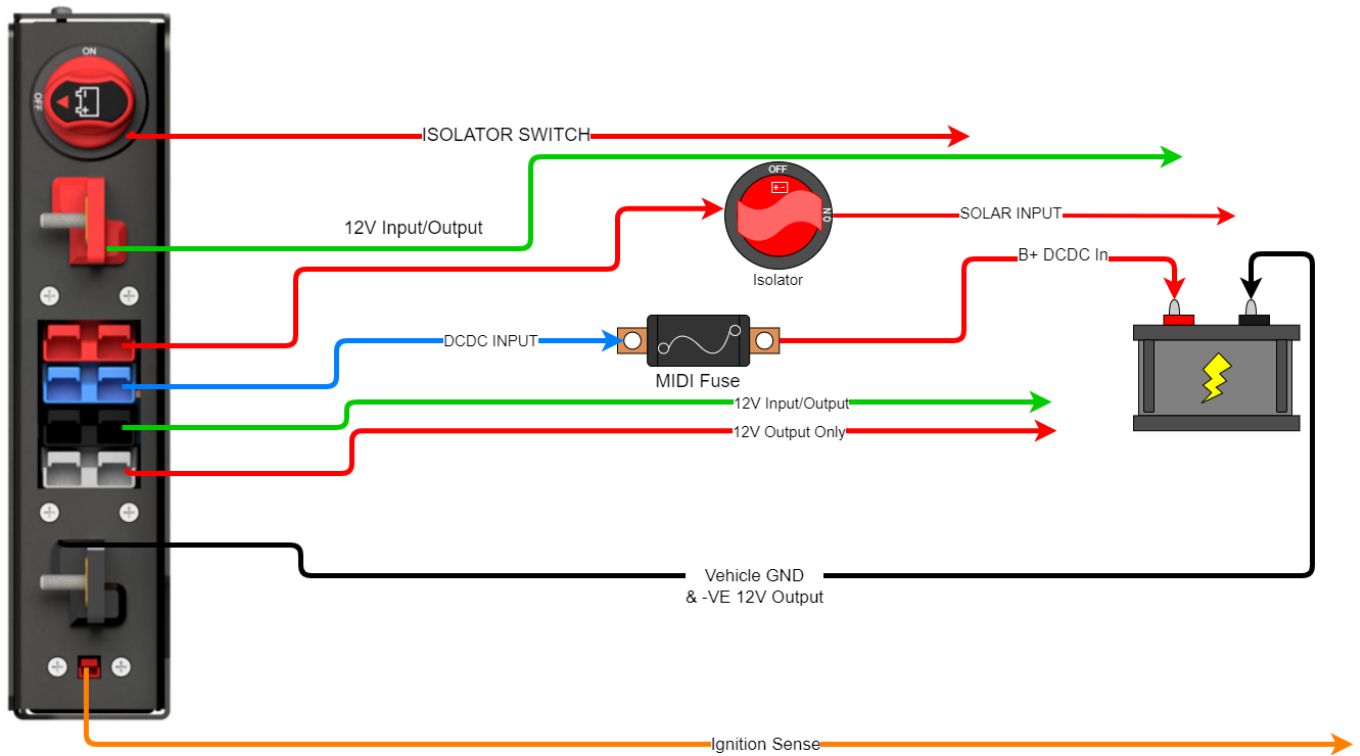

VICTRON CONNECT APP

Download the Victron Connect app onto your smart device to access and manage the Power Hub's Victron components.

Victron Connect info:





Download on the
App Store




Get it on
Google Play



Available on the
Mac app



Download for
Windows

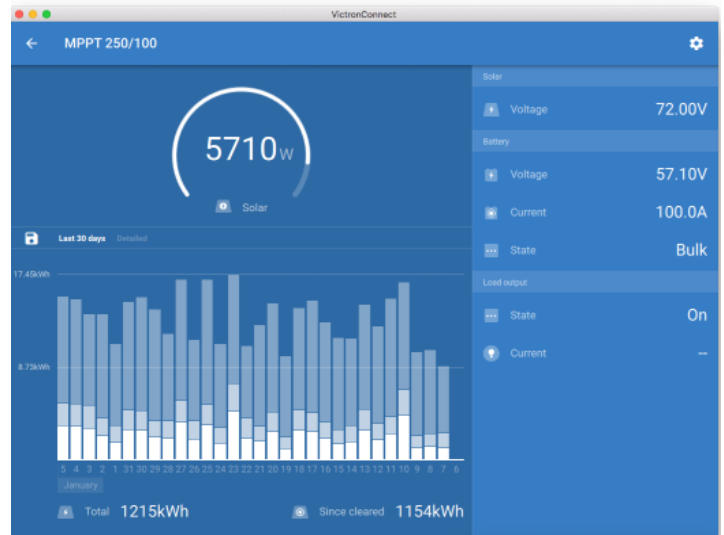

VICTRON SMART SHUNT 500A

Pre-set and suggested programming settings:



110Ah SETTINGS

| ← Battery settings | |
|--|--------------------|
| Battery capacity | 110Ah |
| Charged voltage | 14.0V |
| Discharge floor | 20% |
| Tail current | 1.00% |
| Charged detection time | 3m |
| Peukert exponent | 1.05 |
| Charge efficiency factor | 99% |
| Current threshold | 0.10A |
| Time-to-go averaging period | 3m |
| Battery starts synchronized <input type="checkbox"/> | |
| Battery SOC after a reset will be 100% | |
| State-of-Charge | 85.0% |
| Manually set the current state-of-charge | |
| Synchronize SOC to 100% | SYNCHRONIZE |
| Zero current calibration | CALIBRATE |

Victron SmartSolar MPPT 75/15

SOLAR PANEL ARRAY INPUT LIMITATIONS:



MAX OPEN CIRCUIT VOLTAGE (V_{OC}): 75V

MAX SHORT CIRCUIT CURRENT (I_{SC}): 15A

Pre-set and suggested programming settings:



| Settings | |
|--------------------------|-------------------------------------|
| Battery voltage | 12V ▾ |
| Max charge current | 15A |
| Charger enabled | <input checked="" type="checkbox"/> |
| Battery preset | User defined ▾ |
| Expert mode | <input type="checkbox"/> |
| Charge voltages | |
| Absorption voltage | 14.40V |
| Float voltage | 13.80V |
| Equalization voltage | 13.80V |
| Equalization | |
| Automatic equalization | Disabled |
| Voltage compensation | |
| Temperature compensation | -16.20mV/°C |
| Battery limits | |
| Low temperature cut-off | Disabled |

| Victron Smart Solar MPPT 75/15 | |
|--------------------------------|---|
| Manual |  |
| Datasheet |  |


Example Solar Panel Array

| Example 325W Solar Panel | | | |
|--------------------------|------|--|--------|
| Max power output | Pmax | | 325 W |
| Max power voltage | Vmmp | | 37.5 V |
| Max power current | Immp | | 8.75 A |
| Open circuit voltage | Voc | | 45 V |
| Short circuit current | Isc | | 70 A |



Series Array

Solar panels in series results in the summing of voltages and the current stays the same. Here is an example below:

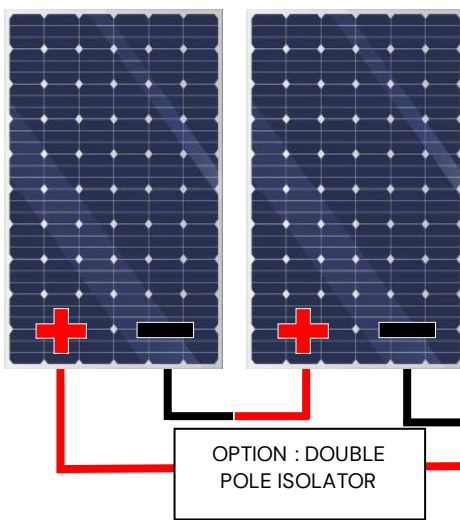


| Output from Solar Panel Array in Series | |
|---|---------------------------|
| Voltage | $37.5 + 37.5 = 75V$ |
| Open circuit voltage | $45 + 45 = 90V$ |
| Current | 8.75A |
| Short circuit current | 10A |
| Watts | $75V \times 8.75A = 650W$ |

Within max open circuit voltage limitation

Parallel Array

Solar panels in Parallel results in the summing of currents and the voltage stays the same. Here is an example below:

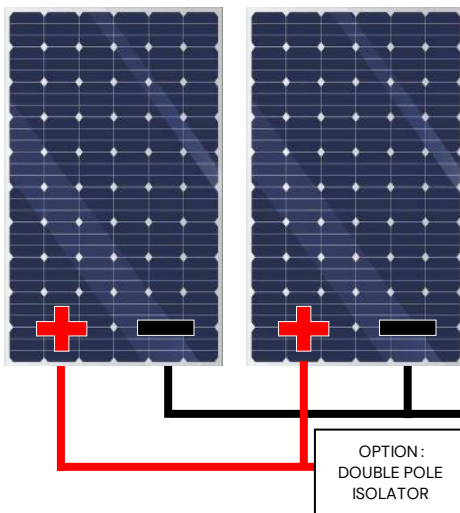

| Output from Solar Panel Array in Parallel | |
|---|------------------------------|
| Voltage | 37.5V |
| Open circuit voltage | 45V |
| Current | $8.75 + 8.75 = 17.5A$ |
| Short circuit current | $10 + 10 = 20A$ |
| Watts | $37.5 V \times 17.5A = 650W$ |

Within max short Circuit current limitation

DCDCCHARGER

The DC-DC charger in the CAN battery allows the battery to charge from a vehicle engine/alternator/start battery. However, to avoid draining the start battery, charging is only desired while the engine is running.

In some applications it can be difficult to determine when the engine is running. Therefore, the DC-DC charger reads several inputs to determine when to turn ON (charge) and turn OFF (stop charging) to achieve:

- Charging when the engine is running, to maximize charging of the Cangoee Battery
- Not charging when the engine is not running, to avoid discharging the vehicle start/cranking battery.

Logic to determine when to turn the DC-DC charger ON and OFF will be implemented using software running on a microcontroller to allow advanced control combining several inputs:


- Start battery voltage
- Ignition signal voltage
- Timing delays
- 2 x 7-position (0-6) rotary switches: user-accessible from outside the battery

The tables below denote the selector switch modes:

Please choose carefully as switches are not easily accessible after installation.


| Delay Switch Position | Delay Off Time | Application |
|-----------------------|----------------|-----------------------------|
| 0 | 0 Sec | Trad Alt, or Ignition Relay |
| 1 | 30 Sec | Smart Alternator |
| 2 | 1 Min | Smart Alternator |
| 3 | 1.5 Min | Smart Alternator |
| 4 | 3 Min | Smart Alternator |
| 5 | 3.5 Min | Smart Alternator |
| 6 | 0 Sec | Ignition Signal Control |

OFF
DELAY

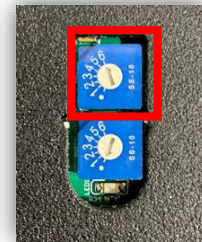

| Switch Position | On Level (V) | Off Level (V) |
|-----------------|--------------|---------------|
| 0 | 11 | 10 |
| 1 | 12 | 11 |
| 2 | 13 | 12 |
| 3 | 13.3 | 12.3 |
| 4 | 13.5 | 12.5 |
| 5 | 13.7 | 12.7 |
| 6 | 14 | 13 |

MEASURED
VOLTAGE

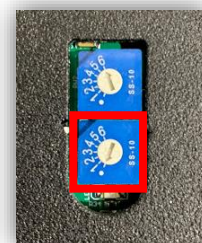

These tables demonstrate the selection modes. The first table denotes the off delay, and the second table is your voltage levels for the DC-DC charger. This works by turning off the DC-DC charger when the voltage decreases to not drain the vehicle battery or cause unexpected surges.

(E.g. if set to 6 and 0 the battery will cut out immediately once the voltage reduces due to the ignition sense, if set to 1 and 4, the battery will cut out after 30 seconds if the voltage goes below 12.5 Volts.)

Recommended Wire Sizes and Gauges Chart

The below table represents the recommended wire sizes/ gauges, for battery installation into vehicles.

| DCDC Capacity / Cable | Recommended Wire Size/ Gauge Figure 8 Cable | Recommended Wire Length |
|-----------------------|--|-------------------------|
| DC-DC 20A | 8 B&S (7.71mm ²) | 1m- Up to/ Maximum 5m |
| DC-DC 40A | 6 B&S (13.5mm ²) | 1m – Up to/ Maximum 5m |
| Ignition Sense Cable | 2-4mm Auto Wire (Running a max of 1-2 Amps) | 1m – Up to/ Maximum 6m |
| Main Positive + | 6 B&S (13.5mm ²) 80A – 120A | 1m – Up to/ Maximum 4m |
| Main GND - | 6 B&S (13.5mm ²) 80A – 120A | 1m – Up to/ Maximum 4m |

Please Note: these wire gauges are suggested to mitigate the voltage drop along the cable. It is recommended that you check the voltage at the Cangoee battery DC-DC input and alter charger selector switches accordingly (**Please Note:** these selector modes and conditions are shown on page 11)

Battery Management System

The Cangoee Battery includes a Battery Management System (BMS) that is mounted internally. The BMS is an electronic solid-state circuit board that manages the cells and protects the battery, including overcharge and over-discharge protection. The BMS will also activate during low voltage at 10.5V, overcurrent at 100A, and short-circuit situations. Unlike lead-acid batteries, overcharging or over-discharging a lithium battery may lead to a hazardous scenario. Therefore, the BMS is essential to the lithium battery. Also, the BMS ensures that the Power Bank cells are equalized throughout its operation.

Safety Tips

The battery contains lithium iron phosphate (LiFePO₄) cells, considered to be the safest of all lithium-ion chemistries. The battery consists of a large amount of stored energy. Please follow these safety tips for use and operation:

- ❑ Ensure the battery is secured safely before travel.
- ❑ Do not drill into the enclosure. Doing so may inadvertently puncture one of the internal cells.
- ❑ Do not short-circuit the battery. Be careful not to drop a metallic object across the two exposed terminals. Always keep the terminal caps on the POS and NEG posts during operation.
- ❑ Do not mount the battery upside down. The battery can also be mounted on its side if mounting upright is not an option.
- ❑ Do not connect multiple batteries in series to raise the voltage. The BMS is not designed to accommodate higher voltages.
- ❑ If the battery is in contact with the skin, please immediately seek medical advice.

Longevity Tips

Factors that mainly affect the lifespan of the battery are depth of discharge and operating temperature. To ensure longevity and use of the battery:

- ❑ Do not fully discharge the battery to zero. Each time the battery is discharged to zero, either intentionally or unintentionally, reduces the lifespan of the battery.
- ❑ Do not discharge the battery below 80% depth of discharge (i.e., 20% full).
- ❑ Do not charge the battery outside the range 0°C - 45°C to maximize the life of the battery and avoid damage to the cells.
- ❑ Do not operate the battery in direct sunlight, mount the battery in a compartment or undercover.

The cells are designed to last 2,000 cycles at 80% DOD (Depth of Discharge) and 5,000 cycles at 50% DOD.

Tips for Use

- ❑ Batteries of the same voltage may be placed in parallel to increase storage capacity. However, each battery should be independently fused, and the battery must be from **CANGOEE**.
- ❑ If the battery is frozen it is essential to wait for the battery to be defrosted and wait for an appropriate room temperature before connecting power to the battery.
- ❑ The battery is splash-proof and water resistant but not waterproof, **DO NOT** directly submerge the battery in water.

- ❑ The battery is designed to be housed in a dry, enclosed compartment, not in direct sunlight or exposed to outside weather conditions for an extended period.

Maintenance Tips

If not using the battery for a prolonged period (months at a time), then store the battery as follows:

- ❑ Disconnect all loads from the battery as there is no external current draw.
- ❑ Store the battery close to full capacity (the battery does not need to be at 100%).
- ❑ There is no need to keep the battery on trickle charge. The battery will self-discharge over time slowly.
- ❑ Within every two months, give the battery a quick recharge to ensure battery longevity.